

Wiring Diagram of Freewing Ares Gyro

www.freewingmodel.com

NOTE

Y-wire ① is used to control the working mode of the gyro, such as turning off the gyroscope or switching to other flight modes. Its default working mode is NORMAL, which is a mode commonly used by experienced pilots. If you do not need to switch working modes during flight, this control wire can be omitted.

